

# GUIDANCE FOR USE


## PROTECT Cryopreservation System

All samples should be kept cool until testing is performed.

### SETUP FOR FREEZING

#### STEP 1

Make a suspension of the organism in the vial liquid.

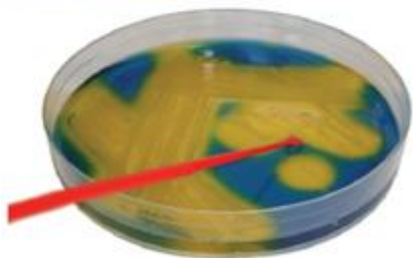

#### STEP 2

Shake vial to coat the beads.  
Stand for 30 seconds.



#### STEP 3

Remove vial liquid using pastette (TS/126-H).



#### STEP 4

Label, place in freezer.  
Done!



### RECOVERY FROM FREEZING

#### STEP 5

Remove one bead using a sterile needle (TS/3-C).



#### STEP 6

Roll bead directly onto medium or place in broth and incubate.



Have you considered? Fine Tip Pastettes - TS/126-H



**Technical Service**  
Consultants Ltd

[www.tscswabs.co.uk](http://www.tscswabs.co.uk)  
Tel: +44 (0)1706 620600

GFU\_PROTECT\_v2 - 30/07/2013